



# Kitchen, Bathroom and Bar Sinks

Kitchen and Bathroom sinks use different sizes of adapters

## KITCHEN SINK

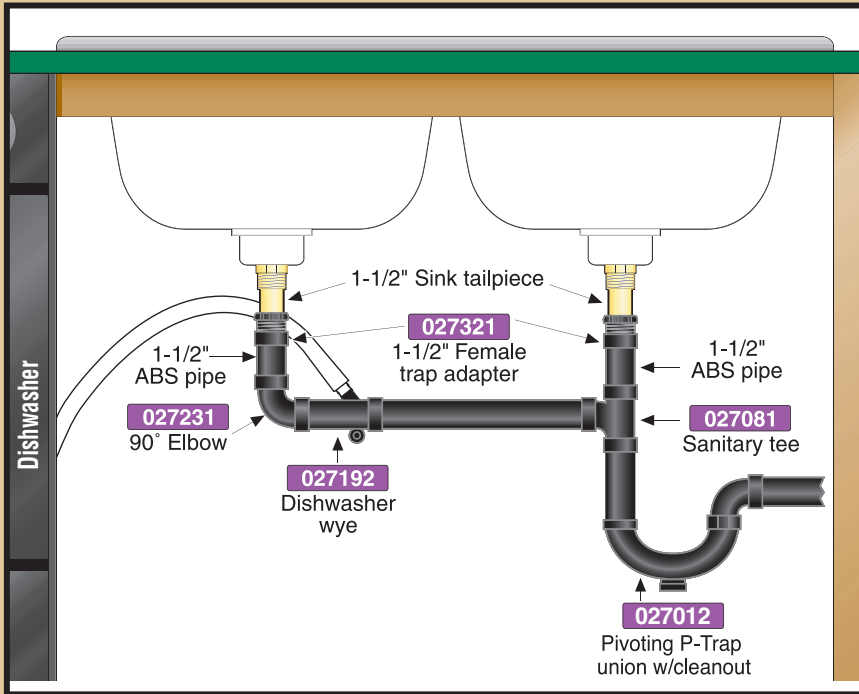

## BATHROOM AND BAR SINKS

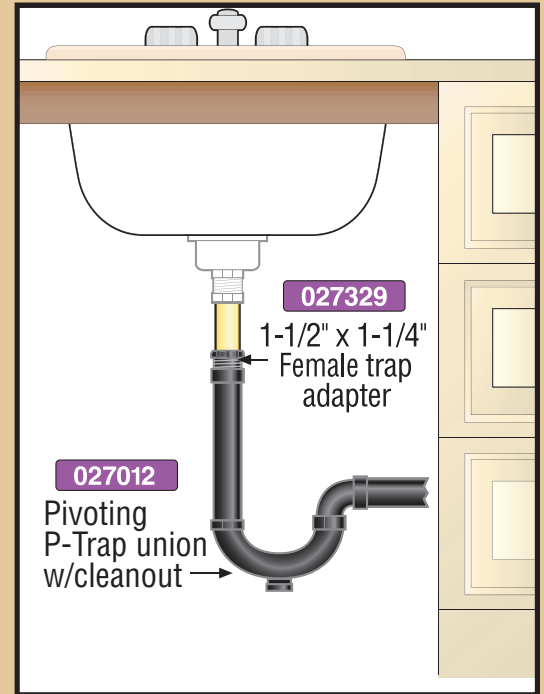

Always refer to local building codes before starting a project



ABS fittings are installed to direct flow towards the drain pipe.



Drain pipes should be sloped at least 1/4" per foot.



Use a Pivoting P-Trap for ease of installation.